


AIJGO 12.81 ESD Wrist strap monitor user manual



1. Wrist strap connection

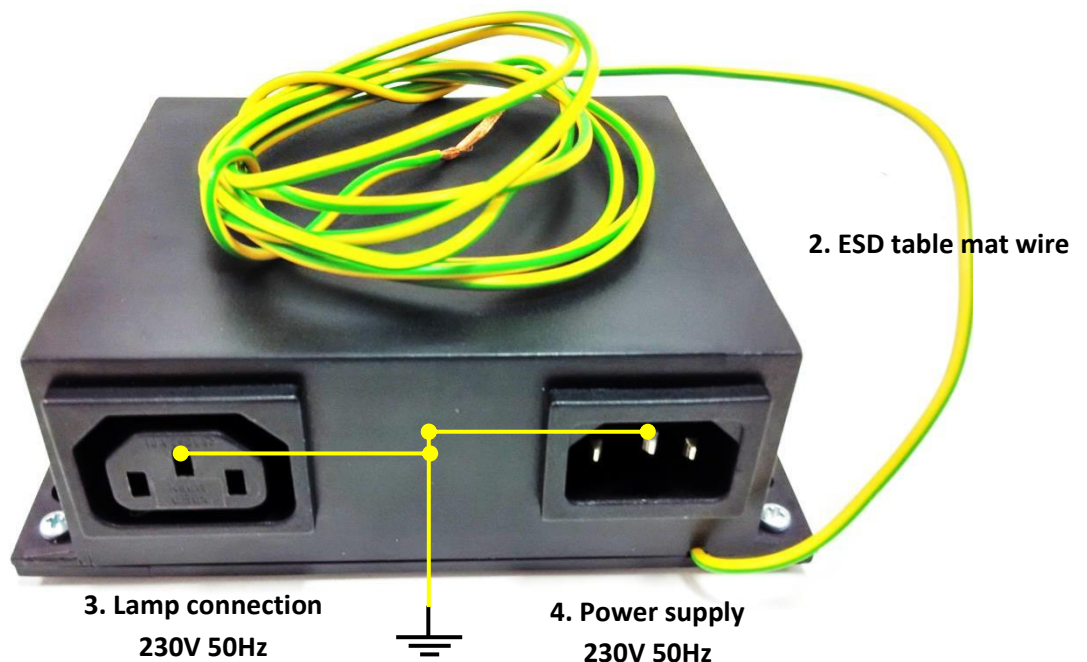

Installation:

- Connect the device to the 230V power source! (4.)
- Connect green-yellow cable to the table mat! (2.)
- Connect lamp to the lamp connection of the device! (3.)

Operation:

1. ESD table mat check

- If the green-yellow cable is connected to table mat and the resistance of the table mat is good the LED1 lights green. Otherwise the LED1 lights red.

2. Wrist strap check

- If wrist strap is connected to the connection point „1.” and wrist strap is worn and the wrist strap works well the LED2 lights green. Otherwise LED2 lights red.

3. Internal speaker

- The device has an internal speaker which gives alarm sound when the measured results of table mat or wrist strap are bad. Any of LEDs lights red. If both LEDs lights green, the speaker does not give alarm.
- The speaker will not give alarm if wrist strap does not connect despite the fact that any of LEDs lights red.

4. Table light working

- You need to connect your lamp to the wrist strap monitor and the lamp gives electricity from the wrist strap. Maximum 8A current.
- If wrist strap is switched off the table light does not light.
- Table light is active when table mat is good and wrist strap is connected.
- Table light is independent of result of wrist strap check.